

Pos. No.	Ref. No.	Description	Pos. No.	Ref. No.	Description
1	187228	Right Housing	36	187253	Fix set
3	183441	Screw ST4.1X16 MBS 976&MBS 976E	37	187254	Cover
4	187230	Self-tapping screw ST3x16F	38	187255	Spanner
5	186744	Screw ST3.0x10	39	187256	Washer 8
6	187231	TIMING BELT L110X031	40	187257	Bearing
7	187232	Brush Support	41	187259	Roller
9	187233	Brush	42	187260	Shaft
10	187234	SUPPORT LUMP	43	187261	Washer
13	183448	"U" ceramic MBS 976&MBS 976E	44	187262	Spring
14	187235	Washer	45	187263	Support
15	187236	Washer	47	187264	Screw 6X12
16	187237	Adjustment knob	48	187265	Big Spring
17	187238	Left Housing	49	187266	Nut M8X1
18	187239	Self-tapping screw ST4x22	50	187267	Drum Wheel
19	187240	Belt Cover	51	187268	Washer
20	187241	Cord set	52	187269	Washer
21	186729	Cord protector	53	187270	Wash for shaft
22	187242	Cable clip	54	187271	Self-tapping screw ST4x16
23	186731	Capacitor 0.22uF	55	187272	Aluminium Support assembly
24	187243	Switch	56	187273	Axes gear
25	187244	Stator Assembly	57	187274	Bearing 627-2Z
26	187245	Self-tapping screw ST4x 45	58	187275	Knob spring
27	187246	Guide ring	59	187276	Big Wheel
28	187247	Damping washer	60	187277	Dust Bag Assembly
29	187248	Bearing 626-2Z	61	186698	Washer Φ8
31	187249	Armatur assembly	62	187278	Transmission shaft
32	187250	Bearing cover	63	187279	Pin
33	187251	Bearing 608-RS	64	187280	Big Gear
34	187252	Small wheel			

MBS 776

