

| POS. No. | Ref. No. | Description | POS. No. | Ref. No. | Description |
|----------|----------|---------------------------------|----------|----------|----------------------------|
| 1 | 187228 | Right Housing | 36 | 187253 | Fix set |
| 3 | 183441 | Screw ST4.1X16 MBS 976&MBS 976E | 37 | 187254 | Cover |
| 4 | 187230 | Self-tapping screw ST3x16F | 38 | 187255 | Spanner |
| 5 | 186744 | Screw ST3.0x10 | 39 | 187256 | Washer 8 |
| 6 | 187231 | TIMING BELT L110X031 | 40 | 187257 | Bearing |
| 7 | 187232 | Brush Support | 41 | 187259 | Roller |
| 9 | 187233 | Brush | 42 | 187260 | Shaft |
| 10 | 187234 | SUPPORT LUMP | 43 | 187261 | Washer |
| 13 | 183448 | "U" ceramic MBS 976&MBS 976E | 44 | 187262 | Spring |
| 14 | 187235 | Washer | 45 | 187263 | Support |
| 15 | 187236 | Washer | 47 | 187264 | Screw 6X12 |
| 16 | 187237 | Adjustment knob | 48 | 187265 | Big Spring |
| 17 | 187238 | Left Housing | 49 | 187266 | Nut M8X1 |
| 18 | 187239 | Self-tapping screw ST4x22 | 50 | 187267 | Drum Wheel |
| 19 | 187240 | Belt Cover | 51 | 187268 | Washer |
| 20 | 187241 | Cord set | 52 | 187269 | Washer |
| 21 | 186729 | Cord protector | 53 | 187270 | Wash for shaft |
| 22 | 187242 | Cable clip | 54 | 187271 | Self-tapping screw ST4x16 |
| 23 | 186731 | Capacitor 0.22uF | 55 | 187272 | Aluminium Support assembly |
| 24 | 187243 | Switch | 56 | 187273 | Axes gear |
| 25 | 187244 | Stator Assembly | 57 | 187274 | Bearing 627-2Z |
| 26 | 187245 | Self-tapping screw ST4x 45 | 58 | 187275 | Knob spring |
| 27 | 187246 | Guide ring | 59 | 187276 | Big Wheel |
| 28 | 187247 | Damping washer | 60 | 187277 | Dust Bag Assembly |
| 29 | 187248 | Bearing 626-2Z | 61 | 186698 | Washer Φ8 |
| 31 | 187249 | Armatur assembly | 62 | 187278 | Transmission shaft |
| 32 | 187250 | Bearing cover | 63 | 187279 | Pin |
| 33 | 187251 | Bearing 608-RS | 64 | 187280 | Big Gear |
| 34 | 187252 | Small wheel | | | |

