

POS. No.	Ref.No.	Description	POS. No.	Ref.No.	Description
1	186569	LEFT HOUSE	57	186545	WIND BOARD
2	186573	MOTOR REAR COVER	58	186461	WASHER
3	186418	SELF-TAPPING SCREW 5X16	59	186460	SPRING WASHER
4	186525	SELF-TAPPING SCREW 5X35	60	186458	STATOR SCREW
5	186572	FRONT HANDLE COVER	61	186544	SUPPORTING BOARD
6	186557	FENDER	62	186543	WIRE SLEEVE
7	186558	GASKET	63	186540	SELF-TAPPING SCREW
9	186559	BRAKE SPRING	64	186451	MOTOR GEAR WHEEL BUSHING
10	186560	SELF-TAPPING SCREW	65	186450	MOTOR GEAR WHEEL
11	186571	REAR HANDLE COVER	66	186449	HEXAGON SPECIAL NUT
12	186570	ELECTRIC WIRE	68	186541	DUSTPROOF COVER
13	186490	CAPACITANCE	69	186534	KNOCKOUT PLATE TENSE BOLT
14	186487	CABLE SLEEVE	70	186533	KNOCKOUT PALTE SEAL RING
15	186568	CABLE PRESSBOARD	71	186443	SELF-LOCKING NUT
16	186431	SELF-TAPPING SCREW 4X12	72	186442	608Z REAR BEARING
17	186501	SWITCH	73	186441	OUTPUT SHAFT GEAR
18	186567	SWITCH BUTTON	74	186539	SHAFT SLEEVE
19	186566	CHAIN WHEEL	75	186439	BRAKING TORSIONAL SPRING
20	186556	SELF-TAPPING SCREW	76	186538	OUTPUT SHAFT
21	186565	DIVIDER ROD FILLER	77	186537	6900Z REAR BEARING
22	186564	SWITCH CONNECTION ROD	79	186542	MOTOR ASSEMBLY
23	186563	MICROSSWITCH	80	186474	OIL PUMP ASSY'
24	186467	MOTOR SUPPORT ASSY'	83	186527	OIL BOX
25	186562	CONNECTING CLAMP	84	186427	OIL TANK COVER ASSY'
26	186561	CONNECTING WIRE	85	186526	OIL BOX MODULE
27	186477	BRAKE ROD SPRING	86	186535	CIRCLE WHEEL ASSY"
28	186553	BRAKE ROD	87	186536	OUTPUT SHAFT MODULE
29	186554	MID-JUNCTION ROD	88	186528	OIL BOX CONNECTION RUBBER BAND
30	186555	BRAKE-ROD ADJUSTER	89	186424	OIL TANK CONTACTING END CAP
32	186552	OIL CONNECTOR	90	186423	SPONGE
34	186551	RUBBER RING	91	186529	FIX ADPTOR
35	186473	FLANGE FACE SELF-TAPPING SCREW 3X12	93	186523	RIGHT HOUSE
36	186421	HYALINE OIL TUBE	94	186522	SELF-TAPPING SCREW 4X10
37	186636	OIL PUMP MAIN BODY	97	186417	TENSIONING SPRING/
38	186637	PISTON SLEEVE	98	186517	SEAL COVER
39	186638	PLUNGER SUPPORT	99	186516	SPROCKET
40	186639	WORM GEAR	100	186415	E-CIRCLIP/8CE-07B/TV 1835
41	186640	TURBINE GEAR	101	186524	BUFFER PLATE
42	186641	OIL PUMP TENSION SPRING	103	186520	MACHINE SCREW 4X10
43	186471	BRUSH CLAMP	106	186521	RUBBER UNDERLAY
44	186468	MOTOR REAR SUPPORT	107	186513	MACHINE SCREW
45	186469	BRUSH HOLDER	108	186519	RIGHT HOUSE INSERT
46	186470	BRUSH CARBON	109	186518	OUTPUT OIL SEAL RING
47	186472	SELF-TAPPING SCREW 3X8	110	186515	END UO WITHOUT TOOL
48	186550	CONNECTING WIRE	111	186548	WASHER
49	186549	CONNECTING WIRE	112	186514	SPRING FOR SHAFT
50	186464	CONNECTING WIRE	113	186512	ADJUSTING RING
51	186462	HEX NUT/8NA-04D01	114	186511	COMPACT KNOB SPING
52	186459	WASHER/8WF-04B	115	186510	LOCKING KNOB
53	186547	STATOR	120	186532	CHAIN BAR 16"/
54	186457	627Z REAR BEARING	121	186531	SAW CHAIN 16"
55	186546	ROTOR	122	186530	KNIFE COVER
56	186455	6000Z FRONT BEARING	125	187497	Rear cover screw 5X150

