

POS. No.	Ref.No.	Description
1	186610	SPEED CHANGING BOX COVER
2	186609	SELF-TAPPING SCREW 5X20
3	186611	SELF-TAPPING SCREW 5X55
4	186427	OIL TANK COVER ASSY'
10	186608	SWITCH TRIGGER
11	186597	OIL BOX
12	186425	OIL TANK RUBBER JOINTS
13	186424	OIL TANK CONTACTING END CAP
14	186423	SPONGE
15	186422	OIL BOX CONTACTING
16	186607	CONNECTING WIRE
17	186606	DEAD BLOCK
18	186418	SELF-TAPPING SCREW 5X16
19	186540	SELF-TAPPING SCREW
20	186592	OUTPUT SHAFT ASSY'
22	186525	SELF-TAPPING SCREW 5X35
30	186614	ROTOR ASSY'
31	186602	END CAP
32	186612	NUT
33	186613	SMALL BEVEL GEAR
37	186615	WIND SCREEN
38	186616	SELF-TAPPING SCREW 4X60
39	186617	STATOR
45	186620	AUXILIARY HANDLE ASSY'
48	186623	LEFT BACK HANDLE
49	186472	SELF-TAPPING SCREW 3X8
50	186622	CABLE SHIELD
51	186621	POWER LINE
52	186490	CAPACITANCE
53	186624	CABLE CLAMP
54	186431	SELF-TAPPING SCREW 4X12
55	186625	SWITCH BUTTON
56	186626	SWITCH
57	186627	BRUSH COVER
58	186628	CARBON
59	186619	BRUSH
60	186618	HOUSING
61	186629	PUSH ROD SPRING
62	186574	SWITCH PUSH ROD ASSY'

POS. No.	Ref.No.	Description
63	186578	OIL PUMP ASSEMBLY
64	186587	LIFTING LEVER
65	186576	RIGHT BACK HANDLE
67	186577	GRIP
73	186603	MIDDLE COVER ASSY'
74	186584	BRAKE BAR ASSY'
75	186596	OIL BOX ASSY'
76	186535	CIRCLE WHEEL ASSY'
78	186591	CONTROL SWITCH
79	186590	BRAKE BAR
80	186589	BRAKE BAR RETAINING PLATE
81	186588	BRAKE BAR SPRING
82	186558	GASKET
83	186586	BRAKEING GASKET
84	186585	MACHINE SCREW 5X12
85	186479	SPRING LAMINATION
86	186583	OIL JOINT
87	186551	RUBBER RING
88	186581	BAFFLE
89	186580	SELF-TAPPING SCREW 4X25
90	186443	SELF-LOCKING NUT
91	186442	608Z REAR BEARING
92	186595	BIG BEVEL GEAR
93	186594	SHAFT SLEEVE
94	186439	BRAKING TORSIONAL SPRING
95	186593	OUTPUT SHAFT
96	186417	TENSIONING SPRING
97	186517	SEAL COVER
98	186416	SPROCKET
99	186415	E-CIRCLIP
100	186601	FLAT GASKET
101	186512	ADJUSTING RING
102	186511	COMPACT KNOB SPING
103	186510	LOCKING KNOB
110	186598	GUIDE BAR
111	186599	CHAIN
112	186600	BLADE COVER
115	187649	Screw
116	187650	Clamp

